




J. Dub's Weather Vane Instructions

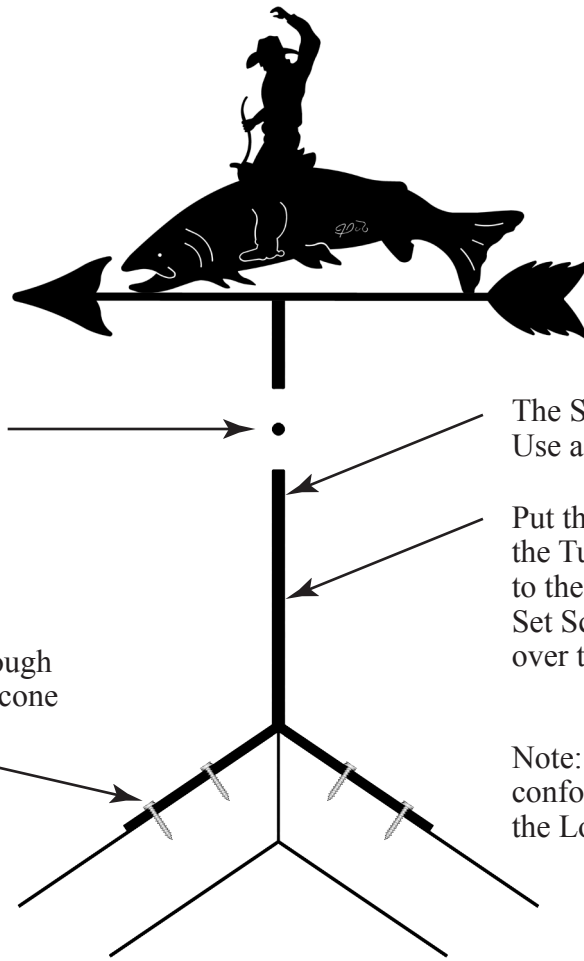

Put the Steel Ball in the Tube with Grease. Then put the Tube on the Stanchion with the Ball inside.

The Lag Bolts need to be long enough to reach the rafters. Coat with silicone caulk to prevent leaking. If a rafter or something solid is not available, through bolting is also an option. Be sure to use a Backing Plate of some kind, preferably metal.

The Stanchion must be plumb! Use a level.

Put the Direction Indicator just below the Tube. Adjust the Direction Indicator to the proper direction and tighten the Set Screw, being careful not to over tighten.

Note: The Roof Mount can be bent to conform to the roof. If it is not far off the Log Bolts will pull it down.

Remember: The Roof Mount must be mounted to a rafter, beam or something solid!! If not, the screws will pull out with the force of the wind and you will be back on the roof.

The Stanchion **MUST BE PLUMB**. Use a level during and after installation. After the Lag Bolts are in place the Stanchion can be bent a little to plumb.

Your Weather Vane can be repainted with any high quality flat black paint.

A properly installed Weather Vane will give you many years of trouble free "Flying." If you have any problems or comments please feel free to call us at 1-800-622-9015.

Enjoy your Weather Vane!
- J. Dub's